Table of contents

Compatible iPod & iPhone 1
MediaBridge kit contents 3
Dip switch setting 3
Connection diagram 4
Installation 5
Basic operation 6
Selecting MediaBridge as an audio source 7
USB memory operation 10
USB iPod operation 11
AUX operation 12
Sirius Connect™ operation (on Satellite radio) 13
Troubleshooting 14
Firmware update 16
Disclaimer and warranty 17

Compatible iPod & iPhone

iPod
5th generation (video)*
30GB 60GB 80GB

iPod classic
80GB, 120 GB, 160GB

iPod nano
2nd generation (aluminum)
2GB 4GB 8GB

iPod nano
3rd generation (video)
4GB 8GB

iPod nano
4th generation (video)
8GB 16GB

* Must be used in locked mode.

iPod nano
5th gen. (video camera)
8GB 16GB 32GB

iPod touch
1st gen
8GB 16GB 32GB
2nd gen
8GB 16GB 32GB 64GB
3rd gen
8GB 32GB 64GB

iPhone & iPhone 3G
4GB 8GB 16GB

iPhone 3GS
16GB 32GB

iPhone 4
16GB 32GB

MEDIABRIDGE

MB-1000-Honda integration solution
for Honda/Acura vehicles

Installation Guide/User Manual

DICE logo is a trademark of DICE Electronics, LLC. SiriusConnect, Sirius and XM logos are trademark of SiriusXM. The Made for iPod logo is a trademark of Apple Inc. Apple iPod is not included in the package. For our detailed terms and conditions please visit our website at www.diceelectronics.com.

REV. 080410

MediaBridge kit contents

user manual

MediaBridge Module

MediaBridge Connector

Dip switch setting

Car configuration switches

emulation modes

Use on radios with SAT button for best experience. Must be selected to support external SiriusConnect tuner. Available on North American radios.

Use to retain factory Sirius/XM module, or on radios with integrated satellite tuner. Also for radios that do not support SAT mode. External CDC (trunk, or glove box) must be disconnected. **There is no text display in this emulation.**

Basic operation

Press SAT / XM (for SAT emulation) or CD / AUX (for CDC emulation) to select MediaBridge.

Audio Source Selection*:

Use the SEEK / TRACK / TUNE within the first 5 seconds to cycle between USB iPod/USB Memory > AUX > Sirius while in PRESET/DISC 1

*USB is only selectable if a USB flash drive or iPod is attached. SIRIUS is only selectable if a SIRIUS tuner is attached, not available in CDC emulation.

MediaBridge Interface Settings (within first 5 seconds of entering MediaBridge Emulation):

Select PRESET / DISC 2 to set charge time after ignition off (for iPod).

Select PRESET / DISC 3 to change base volume.

Select PRESET / DISC 4 to set up scrolling text option.

Select PRESET / DISC 5 to set up radio line display type.

Select PRESET / DISC 6 to view MediaBridge firmware version.

(Select PRESET / DISC 1 to apply settings and resume audio playback.)

iPod hold ON	Radio control	iPod control
	✓	×

Before connecting the iPod to the MediaBridge module, turn the hold switch **ON** to fully control and browse the songs from factory radio. The iPod is locked in this state.

iPod hold OFF	Radio control	iPod control
	limited	✓

Before connecting the iPod to the MediaBridge module, turn the hold switch **OFF** to fully control and browse the songs from iPod. The factory radio control and browsing capablities are limited.

Note: Changing the hold switch on iPod to ON/OFF must be done **prior** to connecting the dock cable.

Installation

1. VERIFY COMPATIBILITY
2. DISCONNECT BATTERY

3. REMOVE RADIO FROM CAR



4. INSTALL MediaBridge CABLE



5. ROUTE KIT TO GLOVEBOX OR OTHER ACCESSIBLE LOCATION



6. CONNECT BATTERY & TEST



7. COMPLETE INSTALL BY RE-INSTALLING RADIO



Connection diagram

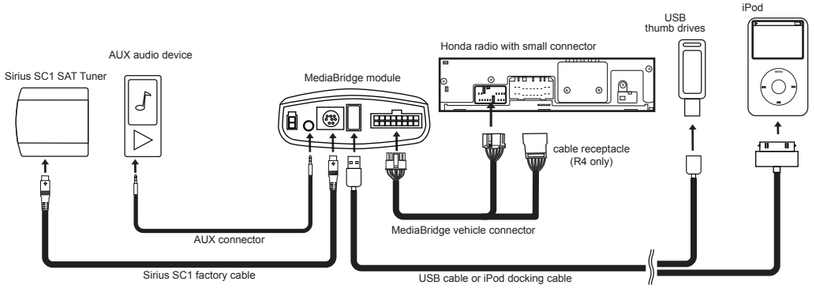

* If factory harness present, connect to receptacle

Selecting MediaBridge as an audio source

CDC emulation (text display is not supported in CDC emulation)



1. Radio source selector (CD / Tape / Media Bridge)
2. Press to change tracks, press and hold to RW or FFW.
3. Browse modes (iPod / USB), Presets (SIRIUS), Sound adjustments (AUX)
4. Press to set repeat song feature
5. Press to randomize song list

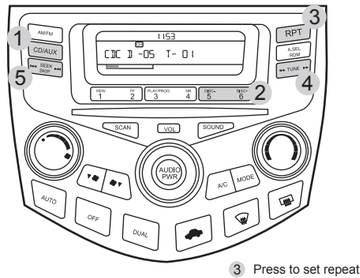

1. Radio source selector (CD / AUX / Media Bridge)
2. Browse modes (iPod / USB), Sound adjustments (AUX).
3. Press to set repeat feature
4. Press to engage FFW or RW
5. Press to change tracks
6. Press to set Random feature

SAT emulation

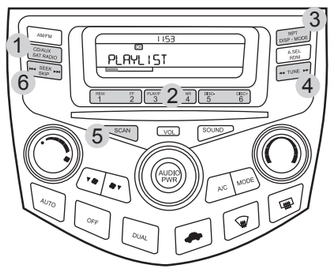

1. Radio source selector (CD / AUX / SAT / Media Bridge)
2. Browse modes (iPod / USB), Presets (SIRIUS), Sound adjustments (AUX)
3. Toggle between available text fields with “DISP” button.
4. Press to change tracks / channels.
5. Press to enter random / repeat selection.
6. Press to engage FFW or RW within a track. Press again to disengage (iPod / USB only). Press to change category (SIRIUS).

SAT emulation with navigation system

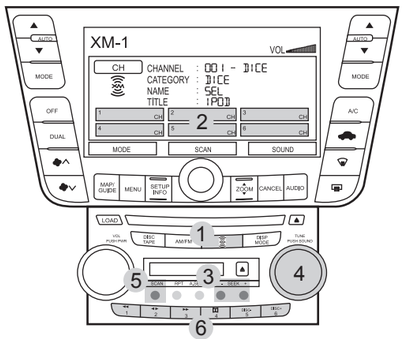

1. Radio source selector (SAT / Media Bridge)
2. or 6 Browse modes (iPod / USB), Presets (SIRIUS), Sound adjustments (AUX)
3. Press to engage FFW / RW (iPod / USB). Press to change category (SIRIUS).
4. Turn to change tracks / channels.
5. Press to enter random / repeat selection.

USB memory operation



• Select PRESET/DISC 1, then use the seek/track/tune buttons to change from song to song.

• Select PRESET/DISC 2-6 to access Folders and use the seek/track/tune buttons to navigate through the folders on your USB flash drive.

• The MediaBridge unit will recognize the first 8 levels of folders, with up to 200 accessible folders within each folder. Only the first 1000 files will be read in each folder, the rest will be ignored.

• Songs play in order of when they were added to the flash drive.

• To change random & repeat settings:

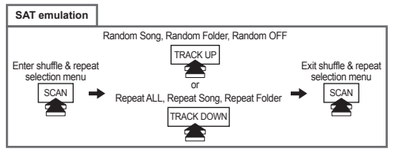

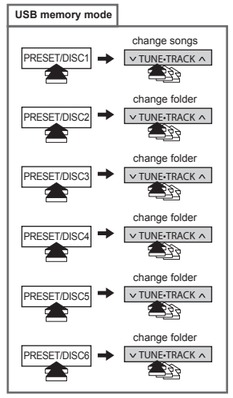

USB iPod operation

• Use PRESET 1-6 (DISC 1-6) to enter browsing modes (SONG, PLAYLIST, ARTIST, ALBUM, PODCAST and AUDIO BOOK).

• Within each mode, use the seek/track/tune buttons to browse the items available

• To change random & repeat settings:

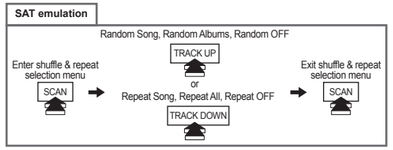

Note: If the iPod is unlocked, radio control will be limited to Songs, Playlists, and Albums. Text display will also be limited to show only current song information.

TIP: In CDC emulation, selecting DISCS is done by using the DISC +/- buttons.

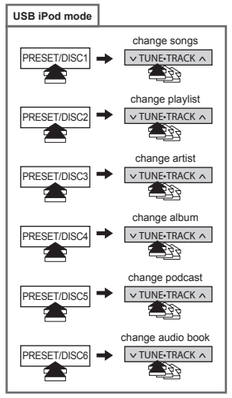

AUX operation

• An auxiliary audio device can be connected to the MediaBridge unit through it's 1/8" headphone jack.

• In AUX mode, music is controlled only through the auxiliary audio device.

• Audio equalizer settings can be adjusted while in auxiliary mode by selecting PRESET 1-4 (DISC 1-4) and using seek/track/tune buttons to increase or decrease levels. DISC/PRESET numbers and corresponding settings are shown on the chart to the right.

TIP: In CDC emulation, selecting DISCS is done by using the DISC +/- buttons.

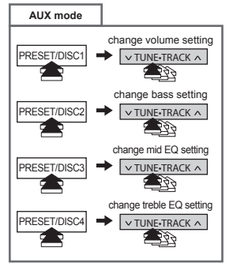



Problem	Solution
No audio from iPod source.	Reset the iPod. Verify proper connection to iPod/interface. Check for compatibility. Older iPod models don't support USB audio.
Why does the radio display show "EMPTY/STOP" and no music plays?	The iPod or USB stick has no playable audio files. See page 10 for limitations of USB memory. Or end of a playlist or folder is reached. Please select a new Playlist or Folder using Preset 2/DISC 2.
Cannot select the interface.	Check DIP switch settings. With the ignition OFF disconnect vehicle harness from module for a few seconds and reconnect. Verify that the correct button is used to access the interface.
Radio/ steering wheel controls do not operate iPod.	Reset iPod and make sure the most recent iPod firmware is installed. Check vehicle user manual on how steering wheel controls work, long presses may toggle alternate function.
Why does category read "PRESELCTD"?	Playback of content selected on the iPod before connected to the interface continues until new content is selected.
What size of USB flash drive should I use?	Large capacities are supported, however up to 4GB is recommended for optimal user experience.

Troubleshooting

Problem	Solution
Text is not displaying in selected emulation.	Identify your audio system first and set switches accordingly on MediaBridge module. Use the DISP button on radio/display to toggle text fields. CD emulation has no text display.
iPod does not charge.	Check all connections. See if iPod charges while connected to computer or wall charger. You may need to reset the iPod.
Music is distorted or sound level is too low with iPod connected.	Make sure all EQ and BASS boost options are turned off on your iPod.
Why is the interface not controlling the iPod/USB drive?	Please make sure that the USB connection is not loose. Make sure that an iPod case is not preventing the dock connector from being fully seated. Disconnect and reconnect the device. If iPod is not responding please try resetting it. USB device must also be FAT16/32 format and contain supported MP3, WMA or AAC content.
Sirius tuner can't be selected.	Unit must be in SAT emulation. Check for proper connection to the mini DIN 8 receptacle.
Why does the message "iPod UNLOCKED" display on screen?	When the MediaBridge is playing iPod music in UNLOCKED mode, browsing mode information isn't available so the "iPod UNLOCKED" notification is shown. To view information associated with browsing modes, ensure the iPod's hold button is set before connecting it to MediaBridge.

Sirius Connect™ operation (available in SAT emulation mode only)

• Stations can be saved to PRESET 1-6 by holding the desired PRESET button, while listening to the station.

• DISP button will toggle between the text fields.

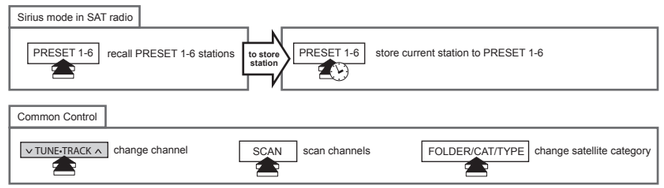

• If a Sirius Connect compatible tuner is not detected, then either a "No Tuner" vehicle message is displayed, or the SIRIUS option will not be selectable. Please refer to the factory manual of your radio system about operating the Satellite mode.

• Go to Channel 000 to view the Sirius Tuner ID for activation. The 12 digit SID display format is in two halves as SID "123456-" followed by "-789ABC".

Firmware update

STEP 1: Disconnect the MediaBridge module from the vehicle.

STEP 2: Download and install necessary software from www.diceelectronics.com

STEP 3: Open software to follow instructions for updating MediaBridge unit.

STEP 4: Plug in MediaBridge via mini USB cable and update.

STEP 5: Disconnect and reinstall the unit into the vehicle.



Mini USB port for software update

Disclaimer and warranty

Important disclaimer, please read!
Unauthorized reproduction or reverse engineering is strictly prohibited! Intellectual property included is distributed under specific license agreement with respective owners and is licensed only, not sold. No warranty, explicit or implied, is stated. Neither DICE Electronics, LLC., nor any of its agents, distributors, dealers or vendors shall be liable for damages.
IN NO EVENT SHALL DICE ELECTRONICS' LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE OR ITS DOCUMENTATION.

Warranty and Support
Products carry a 90 day limited warranty that protects you from defects in material and workmanship of products sold by DICE Electronics, or its authorized agents, distributors and dealers. The warranty period begins the day a product is purchased by the end user. Products found to be defective during the warranty period will either be repaired or replaced by DICE Electronics at no charge unless warranty is void. Unauthorized attempt of repair or alteration of the product in any way immediately voids this warranty. Warranty does not extend to cosmetics or finish. A DICE product specialist must determine that defect is present in the product and issue an RMA. Be sure that all wiring is connected as described in the user manual and all related equipment is functioning properly. DICE Electronics disclaims any liability for other incurred damages resulting from product defects. Any expenses in the removal and reinstallation of products are not covered by this warranty.
If experience any problems or need help, please contact your local dealer or call 888-342-3999, or visit our support site at http://www.diceelectronics.com/support.

Installation notes:

Installed by:	Illustration:
Installed date:	
Other notes: